

Step 1: Make sure that you can go online by connecting your computer to the modem (Without connecting WRT54G router in the network).


Step 2: Connect your computer to the one of the LAN port of WRT54G.

Step 3: Connect the modem to the WAN Port of WRT54G and all devices should be powered on.



Linksys Wireless G Router

Step 4: Open Internet Explorer and type the default IP Address of the Router. The default IP address of WRT54G is 192.168.1.1 and press enter.

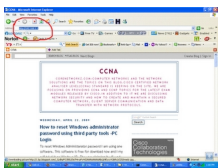

Step 5: After Entering the default user name and Password you will log on to the Router Setup page.

Default user name : {no user name}

Default Password : admin



Update: To configure in PPPOE there is no need to change the current Local IP Address.

Step 6: On setup page select PPPOE instead of "Automatic Configuration DHCP"



Step 7: Enter the user name and Password provided by Skynet Broadband and click on save.

Step 8: Click on status bar and click on connect button.